

Enconnex Intelligent Power Distribution Unit (PDU) USER MANUAL



Legal Disclaimer

The information presented in this manual is not warranted by Enconnex to be authoritative, error free, or complete. This publication is not meant to be a substitute for a detailed operational and site specific development plan. Therefore, Enconnex assumes no liability for damages, violations of codes, improper installation, system failures, or any other problems that could arise based on the use of this publication.

This publication has been compiled in good faith by Enconnex. However, no representation is made, or warranty given, either expressed or implied, as to the completeness or accuracy of the information this publication contains.

In no event shall Enconnex respective officers, directors, or employees be liable for any direct, indirect, consequential, punitive, special, or incidental damages (including, without limitation, damages for loss of business, contracts, revenue, data, information, or business interruption) resulting from, arising from, or in connection with the use of, or inability to use this publication or the content, even if Enconnex has been expressly advised of the possibility of such damages.

Enconnex reserves the right to make changes or updates with respect to or in the content of the publication or the format thereof at any time without notice. Copyright, intellectual, and all other proprietary rights in the content (including but not limited to software, audio, video, text, and photographs) rests with Enconnex or its licensors. All rights in the content not expressly granted herein are reserved. No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.

This Publication shall not be for resale in whole or in part

Table of Contents

Legal Disclaimer	2
This Publication shall not be for resale in whole or in part	2
Table of Contents	3
Figures	6
Tables	8
System Overview	9
Intelligent Network Controller	9
Reset Button	9
Using the Reset Button	9
Connecting the PDU to a LAN Ethernet Port	9
Connecting the PDU to a Computer Serial Port	10
Setup Serial Communication	11
Web Graphical User Interface (GUI) Configuration	13
Internet Protocol (IP) Address	13
Web Configuration	13
Supported Web Browsers	13
Logging In	13
Introduction to the Web GUI	14
Introduction to the Dashboard	17
Power Summary Page	17
Outlet Monitoring Page	17
Simple Network Management Protocol (SNMP)	19
SNMP Management Configuration	19
Setup SNMP	19
Setup SNMP Port	20
Define SNMP V1/V2c User	21
Configuring Users for SNMP v3 Communications	22
Command Line Interface (CLI)	24

Connecting through CLI connection	24
Supported Commands	24
Connecting to the CLI through the serial interface	25
Local Display	27
OLED Display	27
Menu Mode	28
OLED Menu Structure	29
User Access	39
Changing Your Password	39
User Accounts	42
Setting up the system for Radius Authentication	43
Configuring the system with LDAP Server Settings	44
Daisy Chain Configuration	46
Daisy-Chain Overview	46
RNA (Redundant Network Access) Functionality	47
RNA Setup	47
To Configure RNA Mode in the CLI	47
Web GUI configuration	49
PDU Outlet Power Sequence Setup	49
From the PDU GUI Home menu select Control & Manage.	49
Connecting and Configuring Optional Hardware	51
Accessory Hardware Overview	51
Configuring Environmental Sensors	53
Warranty and Regulatory Information	54
Product Warranty	54
Support and Other Resources	54
Acronyms and Abbreviations	55
Appendix A: CLI Commands	59
Help Commands	59
Network Commands	60

User Commands	61
Power Commands	62
Appendix A Table 5: Power Commands	62
Appendix B: Firmware Update Procedure	63
USB Method	63
Web Interface Method	63
FTPS Method	64
Bootloader Mode	65
Firmware Recovery with Bootloader Mode	65
Appendix C: System Recovery	66
Appendix D: PDU Alarms	67
Trap Codes assigned to Alarms List	69
Appendix E: Horizontal Intelligent Network Controller Replacement	74
Appendix F: Vertical Intelligent Network Controller Replacement	76

Figures

Figure 1.2-1: Ethernet Port for Network Connection Figure 1.3-1: Locate Reset Button Figure 1.3-2: Port Setup Settings Figure 2.3-1: Login Page Figure 2.3-2: Landing Page Figure 2.4-1: Power Summary Page Figure 2.4-2: Outlet Monitoring Page Figure 2.4-3: Environmental Page Figure 2.4-4: Security Page Figure 3.1-1: SNMP Management Figure 3.1-2: SNMP General Figure 3.1-3: SNMP Port Figure 3.1-4: Setup SNMP Port and Trap Port Figure 3.1-5: Define SNMP V1/V2c User Figure 3.1-6: Edit V1/2c Manager Figure 3.2-1: SNMP V3 Manager Figure 3.2-2: SNMP V3 Edit Figure 4.2-1: Connect the RJ-45 end of the cable to the Serial+RS485-1 connector Figure 4.2-2: Serial Cable Pinout Figure 5.1-1: OLED Display Orientation Figure 5.2-1: OLED Menu Structure Figure 5.2-2: Main Menu Selections Figure 5.2-3: Setup Menu Figure 5.2-4: Network Submenu Figure 5.2-5: Device Submenu Figure 5.2-6: Screen Submenu Figure 5.2-7: Language Submenu Figure 5.2-8: USB Submenu Figure 5.2-9: Units Submenu Figure 5.2-10: Alarms Menu Figure 5.2-11: Power Menu Figure 5.2-12: Device Submenu Figure 5.2-13: Phase Submenu Figure 5.2-14: Breaker Submenu Figure 5.2-15: Outlet Submenu Figure 5.2-16: Sensors Figure 6.1-1: Changing Your Password Figure 6.1-2: After Login Figure 6.1-3: Change User Password Figure 6.1-4: Change Password Figure 6.2-1: User Settings Figure 6.2-2: Radius Configuration Figure 6.3-1: LDAP Configuration

Figure 6.3-2: Enable Role Privileges Figure 6.3-3: Test LDAP Configuration Figure 7.2-1: How to Connect Cables for Daisy Chain Figure 8.1-1: Control & Manage PDU Figure 8.1-2: Outlet Control Enabled Figure 8.1-3: Edit Outlets Figure 8.1-4: On-Delay Time Figure 8.1-5: Saved Sequence Figure 9.1-2: Sensor Ports for vertical PDU Figure 9.1-3: Sensor Ports for Horizontal PDU Appendix B Figure 1: Upload Firmware Appendix B Figure 2: Uploading Firmware Appendix E Figure 1: Unscrew Intelligent Network Controller Appendix E Figure 2: Remove Intelligent Network Controller from PDU Appendix E Figure 3: Inserting New Intelligent Network Controller Appendix F Figure 1: Removing Top and Bottom Screw from Intelligent Network Controller

Appendix F Figure 2: Disconnecting and Reconnecting the Intelligent Network Controller

Tables

Table 2.3-1: PDU Control Panel Icons Table 4.1-1 - PDU CLI Commands Table 5.1-1: Menu Mode Buttons Table 5.1-2: LED State Descriptions Table 6.1-1: User Permissions Table 9.1-1: Sensor Descriptions and Measurement Appendix A Table 1: Help Commands Appendix A Table 2: System Commands Appendix A Table 3: Network Commands Appendix A Table 4: User Commands Appendix A Table 5: Power Commands Appendix D Table 1: PDU Alarms Appendix D Table 2: Trap Codes: Critical Class Appendix D Table 3: Trap Codes: Warning Class Appendix D Table 4: Trap Codes: Informational Class Appendix D Table 5: Trap Codes: Clear Class

1. System Overview

1.1. Intelligent Network Controller

The Enconnex Monitored Input, Monitored & Switched, Monitored per Outlet, and Monitored & Switched per Outlet PDUs have an integral, hot swappable Intelligent Network Controller. The Intelligent Network Controller contains the OLED interface, control buttons, USB, Ethernet, Serial and Sensor ports, and recessed Reset Button.

1.1.1. Reset Button

Pressing the Reset Button only reboots the Intelligent Network Controller. It does not change the Energy (kWh) value and does not affect the output voltage.

1.1.2. Using the Reset Button

Press and hold the Reset Button for 8 seconds to recover from an Intelligent Network Controller communication failure.

1.2. Connecting the PDU to a LAN Ethernet Port

The PDU is defaulted to DHCP. If you are connected to a network with a DHCP server, the PDU automatically gets an IP address and displays it on the OLED screen. If there is no DHCP server, the default IP address is 192.168.0.1, but again this will be displayed on the PDU.

Connecting the PDU to a LAN provides communication through an Internet or Intranet connection. You can monitor the PDU from any computer connected to the same network. The PDU is set to use DHCP (Dynamic Host Configuration Protocol) by default when delivered. If an IP address is successfully assigned, you will see it shown on the OLED display.

- Locate the Ethernet cable.
- Connect one end of the cable to the Ethernet port on the PDU (see Figure 1). Connect the other end of the cable to the Ethernet port on the router (or another LAN device).



Figure 1.2-1: Ethernet Port for Network Connection

1.3 Connecting the PDU to a Computer Serial Port

If unable to connect to a network, you can change the network settings using the serial interface.

To configure the network settings, perform the following steps:

- Serial connect the PDU to a computer's serial port. Set baud rate for a terminal emulation program.
- Use a CLI command to enable DHCP or set a static IP.
- Verify access to the Web interface. The Ethernet LED on the PDU front panel provides communication status by color and displays activity. The recessed Reset button restarts the PDU (see Figure 2 below).



Figure 1.3-1: Locate Reset Button

1.3.1 Setup Serial Communication

You may configure the network settings using the command line interface (CLI) with a serial connection. Users can connect serially using the optional RJ45-DB9 cable (or make your own cable by creating a unique pinout as described below in the "Serial Cable Pinout to Create Your Own Cable" in Section 4).

- 1. Verify that the computer has a serial port. If your computer does not have a DB9 serial connector, but does have a USB connector, obtain a USB-to-DB9 Adapter to convert the USB to DB9 serial port.
- Using the optional RJ45-DB9 cable, connect the RJ-45 end to the port labeled "Serial+RS485-1" on the front panel of your PDU model (see Figure 1). Connect the DB9 end of the cable to the computer.
- **3.** Open the terminal emulation program (HyperTerminal or PuTTY) on the computer and select the serial port connection (such as COM1).
- 4. Set the communications port as follows:
 - Bits per second: 115200
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: None

(See Port Settings example below)

Bits per second	115200	•
Data bits	8	•
Party	None	•
Stop bits	1	•
Row control	None	•
	Bestore D	daute

Figure 1.3-2: Port Setup Settings

- **5.** Use the default initial login indicated below. Note that the username and password are both case sensitive:
 - Username: admin
 - Password: 12345678 (or your new password)
- **6.** The "Enconnex>" prompt appears after you have logged in, ready to enter the CLI command.
- **7.** To configure network settings, enter the appropriate "net" command and press Enter. All commands are case sensitive. You can type ? to access the commands.
- 8. To enable the IPv4 DHCP by default, run:
 - net tcp ip dhcp
 - Enter Y to confirm and the PDUs Intelligent Network Controller will reboot.
- 9. To set a static IPv4 configuration, run:
 - net tcpip static x.x.x.x (ipaddress) x.x.x.x (netmask) x.x.x.x (gateway)
 - Example: net tcp ip static 192.168.1.100 255.255.255.0 192.168.1.1
 - Enter Y to confirm and the PDUs Intelligent Network Controller will reboot.

2. Web Graphical User Interface (GUI) Configuration

2.1. Internet Protocol (IP) Address

The PDU is by default configured for Dynamic Host Configuration Protocol (DHCP). The PDU automatically obtains an IP address via a DHCP server when connected to a network. The IP address the PDU received is displayed on the OLED screen. After the PDU receives the address, login to the Web interface to configure the PDU and assign a static IP address (if desired). If there is no DHCP server, the default IP address is 192.168.0.1, but again this will be displayed on the PDU.

If the network does not use a DHCP server, see the CONNECTING THROUGH A SERIAL CONNECTION section to configure a static IP address.

- 1. Connect a standard Ethernet patch cable to the Ethernet port on the PDU.
- 2. Connect the other end of the Ethernet cable to the LAN.
- **3.** Make sure the Ethernet port on the PDU shows a solid green light on the left and a flashing yellow light on the right to indicate successful connectivity to the network.
- **4.** Use the menu buttons to look up the IP address of the device on the OLED display by selecting Setup > Network > IPv4 or IPv6 as applicable.
- **5.** In a standard web browser, enter the PDU IP address and proceed to configure the PDU as shown in the Web Configuration section.

2.2 Web Configuration

2.2.1 Supported Web Browsers

The supported Web browsers are Windows Firefox, Linux Firefox, Mozilla Firefox, Windows Internet Explorer Version 11, Microsoft Edge, and Google Chrome mobile and desktop, Apple Safari mobile and desktop.

2.2.2 Logging in to the Web Interface

Logging In

- Open a supported web browser and enter the IP address of the PDU.
- If username and password were configured during the Network Configuration Setup: enter the username and password in the appropriate fields. Press Login or Enter.
- If username and password were NOT configured during the Network Configuration Setup, use the default username: admin and password: 12345678. For security purposes, change the password upon login.

2.3 Introduction to the Web GUI

Login Page



Figure 2.3-1: Login Page

Landing Page



Figure 2.3-2: Landing Page

Number	Icon	Description
1	合	The home icon provides an overview of the PDU with access to the Dashboard, Identification, and Control & Manage.
2	\land	The Alarm icon provides details of the active critical alarms and active warning alarms.
3	\oplus	This icon lets you select a Language. There are seven languages available to choose from: English, Chinese, French, Italian, German, Spanish, Korean and Japanese.
4	ē	This icon provides the logs of the PDU which can be viewed and downloaded.
5	發	The settings icon allows a user to setup the Network Settings, System Management, SNMP Manager, Email Setup, Event Notifications, Trap Receiver, and Thresholds.
6	Q	The search icon allows you to input keywords and search for the related results.
7	?	Information about the PDU can be found using this icon. You also can also click user guide and license to ask for help.
8	admin	This icon shows who is logged in (user or admin). Account passwords can be changed, and user accounts managed through this page.

Table 2.3-1: PDU Control Panel Icons

Menu Dropdowns

Overview	Alarms	Help
俞 🛆 💮 🗌		
Dashboard	Active Critical Alarms 1	Active Critical Alarms 1
Identification	Active Warning Alarms 3	Active Warning Alarms 3
Control & Manage		

Menu Dropdowns



Introduction to the Dashboard 2.4

Power Summary Page

	圆 ☺		Monitored & Switcher	d Per Outlet	PDU		5	earch .	q ?	admin
			Power Environm	nental Securit	y.					
			Summary	PDU#1						
Total Load(%)				PDU Power E	nergy					
				PDUW	Apparent Power(VA)	Active Power(W)	Total Energy(kWh)	Energy(kWh) [since	4	
0.4 % roan				,	82	0	381.00	381.00 [2019/04/25	i 15 58 54	1
PDUP1	Voltana BMS (V)	Low(%)								
B1 0	81115.1	810								
820	82	820								
B3 · 0.5	83126.1	83 • 3.1								
B40	B4125.8	B40								
	B5120.2	850								
85 0										

Figure 2.4-1: Power Summary Page

Power Environmental Security Summary PDUFF Static Outer function of the security Outer function of the security Static Outer function of the security Ou	Outlet Name Current/A Votage(V) Power(VA) Wattist(V) Power Factor Energy(Wh) Energy(101 202 467 109 668			Monitored & S	Switched Per Outle	PDU		Search	Q ?	admin
Summary POURT B1 B2 B3 B4 B5 B4 Status Outer Mam Current(A) Voltage(Y) Power(YA) Valtag(Y) Power Factor Energy(N/h) Energy(N/h) Energy(N/h) • OutEl T1 0.00 115.1 0 0 1.00 0.0 20180425 158.54 • OUTLET 2 0.00 115.1 0 0 1.00 0.0 20180425 158.54 • OUTLET 3 0.00 115.1 0 0 1.00 0.0 20180425 158.54 • OUTLET 4 0.00 115.1 0 0 1.00 0.0 20180425 158.54 • OUTLET 4 0.00 115.1 0 0 1.00 0.0 20180425 158.54 • OUTLET 5 0.00 115.1 0 0 1.00 0.0 20180425 158.54	Summary PDUM B1 B2 B3 B4 B5 B6 Outlet Name Ourren(A) Votage(Y) Power(VA) Vatag(Y) Power Factor Energy(VM) Energy(CM) Outlet T1 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 2 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 3 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 4 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 4 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 4 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 5 0.00 15.1 0 0 1.00 0.0 2019042515.85.41 OUTLET 6 0.00 15.1 0 0 1.00 0.0 2019042515.85.41					Power	Environmental Secur	ty				
B1 B2 B3 B4 B5 B4<	Dutter frame Curren(A) Variage (V) Variage (V) Power Facer Energy (V) Ene						Summary PDU#1					
State: Outer Name Outer Field Power (M) Power (M) Power (M) Power Field Energy (M) Energy (M) Energy (M) • OUTLET 1 0.00 15.1 0.0 0.0 1.00 0.0 2010425 15.85.4 • OUTLET 2 0.00 15.1 0.0 0.0 1.00 0.0 2010425 15.85.4 • OUTLET 3 0.00 15.1 0.0 0.0 1.00 0.0 2010425 15.85.4 • OUTLET 3 0.00 15.1 0.0 0.0 1.00 0.0 2010425 15.85.4 • OUTLET 4 0.00 15.1 0.0 0.0 1.00 0.0 2010425 15.85.4	Outlet Name Outlet() Voltage() Power(VA) Watts(V) Power Factor Energy(Wh) Energy(Wh)					B1	B2 B3 B4 B5 B6					
OUTLET 1 0.00 115.1 0 0 1.00 0.0 2019/0425 15:58:54 OUTLET 2 0.00 115.1 0 0 1.00 0.0 2019/0425 15:58:54 OUTLET 3 0.00 115.1 0 0 1.00 0.0 2019/0425 15:58:54 OUTLET 4 0.00 115.1 0 0 1.00 0.0 2019/0425 15:58:54 OUTLET 5 0.00 115.1 0 0 1.00 0.0 2019/0425 15:58:54	OUTLET 1 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 2 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 3 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 4 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 4 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 5 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 6 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54	Status	Outlet Name	Current(A)	Voltage(V)	Power(VA)	Watts(W)	Power Factor	Energy(kWh)	Energy Since		
OUTLET 2 0.00 115.1 0 0 1.00 0.0 2019/04/25 158/854 OUTLET 3 0.00 115.1 0 0 1.00 0.0 2019/04/25 158/854 OUTLET 4 0.00 15.1 0 0 1.00 0.0 2019/04/25 158/854 OUTLET 5 0.00 15.1 0 0 1.00 0.0 2019/04/25 158/854	OUTLET 2 0.00 115.1 0 0 1.00 0.0 20190425 15.85.49 OUTLET 3 0.00 115.1 0 0 100 0.0 20190425 15.85.59 OUTLET 4 0.00 115.1 0 0 1.00 0.0 20190425 15.56.54 OUTLET 5 0.00 115.1 0 0 1.00 0.0 20190425 15.56.54 OUTLET 6 0.00 115.1 0 0 1.00 0.0 20190425 15.56.54	•	OUTLET 1	0.00	115.1	0	0	1.00	0.0	2019/04/25 15 58 54		
OUTLET 3 0.00 115.1 0 0 1.00 0.0 2019.0425 155.85.43 OUTLET 4 0.00 115.1 0 0 1.00 0.0 2019.0425 155.85.43 OUTLET 5 0.00 115.1 0 0 1.00 0.0 2019.0425 155.85.43	OUTLET 3 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 4 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 5 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54 OUTLET 6 0.00 115.1 0 0 1.00 0.0 2019/04/25 15.85.54	•	OUTLET 2	0.00	115.1	0	0	1.00	0.0	2019/04/25 15:58:54		
OUTLET 4 0.00 115.1 0 0 1.00 0.0 2019/04/25 15:58:54 OUTLET 5 0.00 115.1 0 0 1.00 0.0 2019/04/25 15:58:54	OUTLET 4 0 00 115.1 0 0 1.00 0.0 20190425 1558.54 OUTLET 5 0.00 115.1 0 0 1.00 0.0 20190425 1558.54 OUTLET 6 0.00 115.1 0 0 1.00 0.0 20190425 1558.54	•	OUTLET 3	0.00	115.1	0	0	1.00	0.0	2019/04/25 15:58 54		
• OUTLETS 0.00 115.1 0 0 1.00 0.0 20190425155854	OUTLET 5 0.00 115.1 0 0 1.00 0.0 2019/04/25 15:56:54 OUTLET 6 0.00 115.1 0 0 1.00 0.0 2019/04/25 15:56:54	•	OUTLET 4	0.00	115.1	0	0	1.00	0.0	2019/04/25 15:58:54		
	OUTLET 6 0.00 115.1 0 0 100 0.0 201904/25 15:55:54		OUTLET 5	0.00	115.1	0	0	1.00	0.0	2019/04/25 15:58:54		
• OUTLET 6 0.00 115.1 0 0 100 0.0 2018/04/25 15:56:54			OUTLET 6	0.00	115.1	0	0	1.00	0.0	2019/04/25 15 58 54		

Figure 2.4-2: Outlet Monitoring Page

Environmental Page

		Monitored Inpu	it PDU		Search	Q '
		Power Environmer	ntal Security			
External Sensors						
External Sensors, Type	Sensor Name	Sensor ID	PDU Name	Location	Value	Status
Temperature	H4	1	pdu#1		21.0°C	0
Temperature	Т3	2	pdu#1		21.0°C	•
Temperature	T2	3	pdu#1		21.0°C	0
Humidity	RH	4	pdu#1		57%	0
Humidity	RH	4	pdu#1		57%	

Figure 2.4-3: Environmental Page

Security Page

	М	onitored Input PDU	Search
	Po	wer Environmental Security	
Security Sensors	Sensor Name	PDU Name	Location Status
Dry	DRY	Pdu#1	11-1 Off

Figure 2.4-4: Security Page

3. Simple Network Management Protocol (SNMP)

3.1. SNMP Management Configuration

Setup SNMP

- **1.** Access the Web interface and login.
- 2. Under SNMP Managers, select SNMP General. The SNMP General page displays.



Figure 3.1-1: SNMP Management

3. The SNMP General includes SNMP Access and Version.

SNMP Version	
V1/2c&V3	\bigtriangledown
Save	

Figure 3.1-2: SNMP General

Setup SNMP Port

- **1.** Access the Web interface and login.
- 2. Under SNMP Managers, select SNMP Port. The SNMP Port page displays.

witched PDU	
SNMP Port	
SNMP Port	161
SNMP Trap Port	162

Figure 3.1-3: SNMP Port

3. Setup SNMP Port and SNMP Trap Port

	▲ ● ■ ⊕	M	onitored & Swit	ched Per Outlet PD	U	Edit SNMP Port	×
SNMP Managem	ent					SNMP Port 161	
SNMP General						SNMP Trap Port 162	
Enable 💊	/			SNMP Port	161	Save	
SNMP Version V	1/2c&V3			SNMP Trap Port	162		
_							
SNMP V1/2c Manage	er Read Community	Write Community	Enable		SNMP V3 Manager Username		
0000	public	private	~	Ø	dd Security Level		
000.0	public	private	×	Ø	Authentication F		
0.0.0.0	public	private	×	Ø	Authentication / MD5		
0.0.0	public	private	×	Ø	Privacy Key		
0.0.0	public	private	×	Ø	Privacy Algorith		

Figure 3.1-4: Setup SNMP Port and Trap Port

Define SNMP V1/V2c User

- 1. Access the Web interface and login.
- 2. Under SNMP Manager, select SNMP V1/V2c.
- **3.** In the SNMP V1/V2c panel, select the SNMP V1/V2c manager to configure. Select the pencil icon in the last column

NMP V1/2c Manag	er			
IP Address	Read Community	Write Community	Enable	
0.0.0.0	public	private	\checkmark	Ø
0.0.0.0	public	private	×	Ø
0.0.0.0	public	private	×	Ø
0.0.0.0	public	private	×	Ø
0.0.0.0	public	private	×	Ø

Figure 3.1-5: Define SNMP V1/V2c User

4. The Edit panel pop up displaying the configurable options.

IP Address	
0.0.0.0	
Read Community	
public	
Write Community	
private	
Enable	

Figure 3.1-6: Edit V1/2c Manager

- **5.** Set the following options:
 - IP Address: the IP address of the host for this SNMP V1/V2 manager. Only requests from this address will be acted upon.

Note: An IP address configured to 0.0.0.0 will act as a wildcard and all requests will be acted upon.

- Read Community: the read-only community string to allow an SNMP V1/V2c manager to read a SNMP object.
- Write Community: the write-only community string to allow an SNMP V1/V2c manager to write an SNMP object.
- 6. Click Enable and Save.

3.2 Configuring Users for SNMP v3 Communications

- 1. Access the Web interface and login.
- 2. Under SNMP Managers, select SNMP V3.
- **3.** In the SNMP V3 panel, select the SNMP V3 manager to configure. Select the pencil icon in the last column.

SNMP V3 Manager							
Username	Security Level	Authentication Password	Authentication Algorithm	Privacy Key	Privacy Algorithm	Enable	
dd	NoAuthNoPriv	*******	MD5	*******	DES	\times	Ø
	NoAuthNoPriv	*******	MD5	*******	DES	×	ø
	NoAuthNoPriv	******	MD5	******	DES	\times	Ø
	NoAuthNoPriv	******	MD5	******	DES	×	Ø
	NoAuthNoPriv	******	MD5	*******	DES	\times	Ø

Figure 3.2-1: SNMP V3 Manager

4. The Edit panel pop up displaying the configurable options.

Username	
Security Level	
No Auth No Priv	\bigtriangledown
Authentication Password	
Authentication Algorithm	
MD5	\bigtriangledown
Privacy Key	
Privacy Algorithm	
DES	\bigtriangledown
Enable	

Figure 3.2-2: SNMP V3 Edit

- **5.** Configure the SNMP username.
- 6. Choose a Security Level from the dropdown menu:
 - NoAuthNoPriv: No authentication and no privacy. This is the default.
 - AuthNoPriv: Authentication and no privacy.
 - AuthPriv: Authentication and privacy.
- 7. Enter a new unique password to be used for authentication
- 8. Select the desired authentication algorithm:
 - MD5
 - SHA
- 9. Enter a new unique key for privacy algorithm
- **10.** Select the desired privacy algorithm:
 - DES
 - AES-128
 - AES-192
 - AES-256
- **11.** Click Enable and Save.

4. Command Line Interface (CLI)

4.1 Connecting through CLI connection

The Command Line Interface (CLI) is an alternate method used to manage and control the PDU status and parameters, as well as basic admin functions. Through the CLI a user can:

- Reset the PDU
- Display PDU and network properties
- Configure the PDU and network settings
- Switch outlets on/off
- View user information

Connecting to the CLI requires a terminal emulation program such as HyperTerminal or PuTTY

4.1.1 Supported Commands

The PDU CLI command set for managing and monitoring the PDU includes the following commands:

? command:	PDU help query	
sys command:	PDU system configure and setting	
net command:	PDU net application configure and setting	
usr command:	PDU user operation	
dev command:	PDU device setting	
pwr command:	PDU power setting	

Table 4.1-1 - PDU CLI Commands

NOTE: Command variables are represented in command input syntax surrounded by angle braces (< >). Optional parameters are represented in command input syntax surrounded by straight brackets ([]). For data of type array, the 'x' character as index of array in command input syntax means all indexes. You must be logged into the PDU before commands can be sent. See Appendix A for a list of all CLI commands.

4.2 Connecting to the CLI through the serial interface

Communicating through the serial port requires a specialized optional RJ45-DB9 cable or you can create your own cable as described in the "Serial Cable Pinout to Create Your Own Cable" section.



Figure 4.2-1: Connect the RJ-45 end of the cable to the Serial+RS485-1 connector

To connect the PDU to a computer:

Using the optional RJ45-DB9 cable, connect the RJ-45 end to the port labeled "Serial+RS485-1" on the front panel of your PDU model. Connect the DB9 end of the cable to the serial connector on the computer.

Logging in with HyperTerminal

To login through HyperTerminal, set the COM settings to the following parameters:

- Bits per second: 115200
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

Serial Cable Pinout to Create Your Own Cable

To make your own RJ45-to-DB9 Serial cable, the connections are wired as shown:



Figure 4.2-2 : Serial Cable Pinout

Logging in with SSH via PuTTY

- 1. Ensure SSH has been enabled: On GUI, go to Device Configuration > Network Service > SSH. Select the Enable SSH Access checkbox. Select OK.
- 2. Open an SSH client (PuTTY).
- 3. Enter the IP address in the Host Name field. Select the connection type: SSH
 - For SSH, enter 22 in the Port field.
- 4. Select Open.
- 5. Enter your Username. Press Enter.
- 6. Enter your password. Press Enter.
- **7.** You are now logged into the SSH. Refer to the CLI Commands table below for available commands.

NOTE: SSH connection is not available when serial connection is enabled.

5. Local Display

5.1 OLED Display

The OLED provides information about the PDU and connected devices. The OLED display orientation can be changed using an OLED setting. The display can be rotated 0° and 180°. The PDU has a three-button, graphical OLED panel (see Figure 4). Use the buttons to change the screen display and retrieve specific performance data.



Figure 5.1-1: OLED Display Orientation

The OLED has two modes:

- 1. Screensaver mode: Screensaver mode cycles through a set sequence of screens that display current PDU values. Current values are refreshed every ten seconds. The user cannot select a custom sequence of screens. The screen saver displays automatically after 30 seconds of inactivity from the start-up screen, a menu, or a submenu. Values are refreshed every five seconds.
- 2. Menu mode (OLED main menu): The settings that display under each high level (main) menu depend on your PDU model.

Menu Mode

The table below summarizes how to use the control buttons on the OLED display.

Button	When in Menu Mode:	When in Screensaver Mode:
Menu	Select from the four main menus.	Returns to the previous display screen before entering the screensaver mode.
Scroll	Scrolls down through the list of menu items. NOTE: A highlighted menu item is ready to be selected.	Returns to the previous display screen before entering the screensaver mode.
Select	Opens the selected menu.	Returns to the previous display screen before entering screensaver mode.

Table 5.1-1: Menu Mode Buttons

LED Unit Status

The LED will change colors depending on the state of the PDU.

LED State	Description	
Solid Green	Normal Operation	
Solid Red	Critical or Warning Alarm	
Flashing Orange	No network connection	

Table 5.1-1: LED State Descriptions

5.2 OLED Menu Structure



Figure 5.2-1: OLED Menu Structure

Main Menu Selections

The PDU menu selection hierarchy consists of Setup, Alarms, Power, and Sensors. On the main menu, scroll down to highlight Setup. Press Select. Scroll down to select a submenu and press Select to display the submenu options. Press Menu to return to the previous menu.



Figure 5.2-2: Main Menu Selections

Setup Menu

The Setup menu provides user configuration options including Network, Device, Screen, Language, USB, and Units.



Figure 5.2-3: Setup Menu

Network Submenu

The Network submenu allows you to view IP address IPv4 or IPv6. On the Setup menu, scroll down to Network. Press Select to enter the Network Submenu. Scroll down to highlight the selected option from the menu. Press Select to display the screens that display the IP address. Press Menu to return to the previous menu.



Figure 5.2-4: Network Submenu

Device Submenu

The Device submenu provides the SKU number, Serial number, MAC address and Firmware version. On the Setup menu, scroll down to highlight Device submenu. Press Select to enter the Device Submenu. Scroll down to the item you wish to display and press Select. Press Menu to return to the previous menu.



Figure 5.2-5: Device Submenu

Screen Submenu

The Screen submenu allows you to customize settings for Contrast, Rotate, and Always on. On the Setup menu, scroll down to highlight Screen. Press Select to select the submenu. Press Menu to return to the previous menu.



Figure 5.2-6: Screen Submenu

Language Submenu

The Language submenu allows you to select the language you need to use. On the Setup menu, scroll down to highlight Lang. Press Select to display the screen to select the submenu. After you select the values, press Select to set the values as displayed on the screen. Press Menu to return to the previous menu.



Figure 5.2-7: Language Submenu

USB Submenu

The USB submenu allows you to upload a firmware file and download the event log or data log. On the Setup menu, scroll down to highlight USB. Press Select to enter the USB Submenu. You will be asked to verify if you want to enter the USB operation and Configuration Mode. After you select Yes, the system will reset to the USB operation and Configuration Mode, or Boot Loader mode.

Note 1: If a USB drive is not present in the USB slot, the PDU will enter normal operation after the reset.

Note 2: If you are in USB mode and you want to exit USB mode, you must remove the USB drive before exiting USB mode. Otherwise, the PDU will reset and re-enter USB mode.



Figure 5.2-8: USB Submenu

Units Submenu

The Units submenu displays the temperature units. On the Setup menu, scroll down to highlight Units. Press Select to enter the Units Submenu. After you select the values, press Select to set the values as displayed on the screen. Press Menu to return to the previous menu.



Figure 5.2-9: Units Submenu

Alarms Menu

The Alarms menu displays active alarms for the PDU. On the Main Menu, scroll down to highlight Alarms. Press Select to display the Alarm Screen. When you finish your review, press Menu to return to the main menu.



Figure 5.2-10: Alarms Menu

Power Menu

The Power menu manages device, phase, breaker and outlet. On the Main Menu, scroll down to highlight Power. Press Select. Scroll down to select a submenu and press Select to display the submenu options. Press Menu to return to the previous menu.



Figure 5.2-11: Power Menu

Device Submenu

The Device submenu is to display current, voltage and power. On the Power menu, scroll down to highlight Device. Press Select to display the power values for the entire PDU. Press Menu to return to the previous menu.



Figure 5.2-12: Device Submenu

Phase Submenu

The Phase submenu is to display the status of 3-Phase circuits. On the Power menu, scroll down to highlight Phase. Press Select to display the screens to set the values for the submenu. After you select the phase, press Select to display the values for that phase on the screen. Press Menu to return to the previous menu.



Figure 5.2-13: Phase Submenu
Breaker Submenu

The Breaker submenu is to display power values for the breakers. Press Select to display the values of the first breaker. To go to the next breaker, select next. Press Menu to return to the previous menu.



Figure 5.2-14: Breaker Submenu

Outlet Submenu

The Outlet submenu is to display voltage, current and power from outlet number 1 to number n. On the Power menu, scroll down to highlight Outlet. Press Select to display values for the first outlet. To go to the next outlet, select next. Press Menu to return to the previous menu.



Figure 5.2-15: Outlet Submenu

Sensors Menu

The Sensor menu is to display temperature, humidity, door switch, fluid leak etc. On the Main Menu, scroll down to highlight Sensor. Press Select. This will display the sensor data for the first sensor. To go to the next sensor, select next. Press Menu to return to the previous menu.



Figure 5.2-16: Sensors

NOTE: Maximum of 8 sensors are configured per PDU.

6. User Access

6.1. Changing Your Password

At the initial login page, change the password:

 The Change Password window opens directly. Enter the current password and new password twice to confirm. By default, passwords must be between 8 and 32 characters.



Figure 6.1-1: Changing Your Password

2. Click Change Password to complete the password change.

After initial login, to change the password:

3. Go to User Name>Change Password.

d & Switched	d Per Outle	t PDU		Search	Q	admin v Change Password User Accounts
Summary	PDU#1	ity				
	PDU Power	Energy				
	PDU#	Apparent Power	Active Power	Total Energy	Energy(kWh)	[since]

Figure 6.1-2: After Login

4. The Change User Password window opens.

	Monitored & Switched Per (Change Password
	Power Environmental	Current Password
	Summary PDU#	New Password
Total Load(%)	PDU	Confirm New Password
0.4 %		Change Password

Figure 6.1-3: Change User Password

5. Enter the old password and then new password twice to confirm. By default, passwords must be between 8 and 32 characters.

mange	
assword	
Current Password	
New Password	
Confirm New Password	

Figure 6.1-4: Change Password

6. Click Change Password to complete the password change.

Logging Out

Users should log out after each session to prevent unauthorized changes to the system.

- **1.** Click the user name icon in the top right corner of the screen (see Introduction to the Web Menu).
- 2. Click Log Out in the drop-down menu.

Access Types

There are two levels of access privileges:

- Administrator
- Read Only

The Enconnex PDU comes with a standard Administrator profile and a standard Read Only profile. The "Admin Role" has full operating permissions. By default the "User Role" is a Read Only profile. All other users must be added by a user with administrator privileges. Users are defined by their unique login credentials and by their user role.

The level of access privilege determines what the user will see and what actions the user can perform. The level of access privilege determines which menu items the user can access or which fields display on individual setting and configuration dialogs. Before setting up users, determine the Roles that will be required. Each user must be given a Role. These Roles define the permissions granted to the user.

Role	Default Permissions
Admin	Full permissions that cannot be modified or deleted
User	Read-only permissions. Can monitor the system but cannot change any configuration.
Manager	Full permissions that can be modified and deleted.

Table 6.1-1: User Permissions

User Accounts

Add user profile:

- 1. Go to User Administration>User Accounts.
- 2. Select Add User to create a new user profile.
- **3.** Use the Settings tab to enter the following information:
 - User Name (required)
 - Password (required)
 - Confirm Password (required)

NOTE: Set password requirements in the required field. By default, passwords must be 8-32 characters in length, and to have at least one numeric character, and at least one special character.

- 4. Use the Roles tab to set full or read only privileges.
- 5. Select "Add User" to save the new user profile.
- 6. Modify user profile:
 - Go to User Administration>Users.
 - Select the user name.
 - Select Edit. Make changes to the user profile.
 - Select Update.

Delete user profile:

- Go to User Administration>Users.
- Select the red X next to username.

6.2 Setting up the system for Radius Authentication

1. Go to User Accounts > in the admin menu.

ENCONNEX A C C C	Monitored & Switched Per Outlet PDU	Search	Q ? admin ~
User Settings			Actions ~
Users	LDAP Configuration	Radius Configuration	
Username Role Action	Enable X	Enable X	
admin admin 🔗	LDAP Server	Server	
	Port 389	Port 1812	
user user 🖉 🗙	Type OpenLDAP	Secret	
manager manager 🔗 🗙	Base DN		
	Bind Password		
	Search User DN		
	Login Name Attribute		
	User Entry Object Class		
	User Liney Oxfort Glass		

Figure 6.2-1: User Settings

2. Go to Radius Configuration and click the edit pencil.

Enable	
Server	
Port	
1812	
Secret	

Figure 6.2-2: Radius Configuration

- **3.** Select the Enable button.
- 4. Enter Server IP address field, Port number field, and Secret field.
- 5. Click save and your Radius authentication is complete.

6.3 Configuring the system with LDAP Server Settings

To setup LDAP to access the Active Directory (AD) and provide authentication when logging into the PDU via the Web Interface:

- 1. Go to User Settings (under the ADMIN Menu) > LDAP Configuration.
- 2. Select the LDAP Enable checkbox.
- **3.** Use the drop-down menu to choose the Type of LDAP Server. Choose Microsoft Active Directory.
- **4.** Enter an IP Address of the domain controller/Active Directory (AD) Server. i.e.: 192.168.1.101 (example).
- 5. Enter a Port.

NOTE: For Microsoft, this is typically 389.

- 6. In the Base DN field, enter in the account to be used to access AD. i.e. CN=myuser, CN=Users, DC=EMEA, DC=mydomain, DC=com
- 7. Enter the password in the Bind Password and Confirm Password fields.
- In the Search User DN field, i.e. DC=subdomain, DC=mydomain, DC=com 10.
- 9. In the Login Name Attribute field, enter sAMAccountName (typically)
- **10.** In the User Entry Object Class field, enter person. With these LDAP settings configured, the Bind is complete. (see screen-shot)

Edit	
DAP Configuration	
Enable	
0	
LDAP Server	
192.168.1.101	
Port	
389	
Туре	
Microsoft Active Directory	\bigtriangledown
Base DN	
CN=Idap_auth,OU=Service Accounts,OU=Global,DC=	
Bind Password	
Search User DN	
DC= DC=com	
Login Name Attribute	
sAMAccountName	
User Entry Object Class	
person	

Figure 6.3-1: LDAP Configuration

Once LDAP is configured, the PDU must understand for which group authentication occurs. A role must be created on the PDU to reference a group within Active Directory (AD).

- **1.** Within the Active Directory, create a group for the users that you wish to be PDU administrators. i.e. admins
- Within the PDU Web Interface, go to User Settings (under admin menu) > Roles. Enter the Role Name that was created in AD. i.e. admins
- 3. Enable role privileges as needed. (see screen-shot)

Edit
Role
Role Name admin
Description admin operation
Privileges Administrator Privileges
Save

Figure 6.3-2: Enable Role Privileges

4. LDAP authentication is ready to use. To test this, just click save, then click on "LDAP Configuration" again and type an Active Directory user name/password into the test box. Click Test LDAP Configuration. If a box pops up with all green "SUCCEEDED" (no X's), the LDAP is successfully configured.

Figure 6.3-3: Test LDAP Configuration NOTE: Be sure to login without a domain name.

7. Daisy Chain Configuration

7.1 Daisy-Chain Overview

In daisy chain mode, up to four (4) PDUs of the same SKU number can be connected via one (1) IP address. This allows users to gather information and data on all daisy- chained PDUs from the master PDU. The daisy chain functionality reduces network cost for PDUs. For example, a standard network switch used in a data center may contain 24 ports. Without using the daisy chain function, each port would supply network-connection to one (1) PDU. However, if using the daisy chain features, a typical network switch with 24 ports can supply network connections for up to 96 PDUs.

7.2 Daisy-Chain Setup

- After the initial PDU is configured, connect an Ethernet cord from the RS485-2 port on the configured PDU to the Serial+RS485-1 port on the second PDU in the daisy chain line.
- Repeat step 2, connecting PDUs from the RS485-2 port to the Serial+RS485-1 port for up to 4 PDUs.

NOTE: The total length of the Ethernet cords connecting the PDUs must be less than 15m (49 ft.).

• Go to the Web interface (or management software) to manage and control the PDUs in the daisy chain.



Figure 7.2-1: How to Connect Cables for Daisy Chain

7.3 RNA (Redundant Network Access) Functionality

RNA allows for secure access of PDU data and statistics on 2 separate, private networks. RNA must be used with a redundant power delivery design including two rack PDUs for each IT rack. PDUs used in RNA applications must be the same SKU.

How it Works

Using RNA, the main and expansion unit maintain two separate private networks that do not overlap.

- RNA works using a redundant power delivery design (i.e., two rack PDUs for each IT rack).
- Each PDU is separately connected to the expansion and main's private communications network.
- The two PDUs are connected with a data communications bus to allow PDUs to share user-defined information.
- Each PDU acts like a main PDU to report PDU data to both networks.

7.4 RNA Setup

To setup RNA mode on two PDUs, the user must configure the PDUs for RNA Mode using the CLI and then connect the LAN Network cords and Ethernet cords between PDUs.

To Configure RNA Mode in the CLI

- 1. Login to the CLI and enter the command 'dev daisy rna.'
- 2. The following message will appear:
 - Reboot Required for change to take effort.
 - System Reboot now, Are you sure? (Y/N)
- **3.** Enter Y to confirm reboot.
- **4.** After reboot, the PDU will be setup to RNA Mode.
- 5. Repeat this process for the second PDU.

To Connect the PDUs for RNA Setup

After the PDUs are configured for RNA:

1. Connect an Ethernet cable from the Landlord LAN Network to the Ethernet port of the first PDU. This will have limited access/permissions.

- **2.** Connect an Ethernet cable from the Tenant LAN Network to the Ethernet port of the second PDU. This will have full access to both PDUs.
- **3.** Connect an Ethernet cable from the Serial+Rs485-1 port on first PDU to the RS485-2 port on the second PDU.
- **4.** Connect another Ethernet cable from the Rs485-2 port on the first PDU to the Serial+Rs485-1 port on the second PDU.
- 5. In RNA mode, the default account username is 'landlord' and the password is '12345678'. This account is configured for proper access and control in RNA mode.
- 6. To enable this account, login to the CLI with admin credentials.
- 7. Enter the command 'dev daisy rna init'.
- **8.** The following message will appear to confirm the landlord account is enabled: SUCCESS.
- **9.** RNA is now configured and enabled.

8. Web GUI configuration

- 8.1 PDU Outlet Power Sequence Setup
 - 1. From the PDU GUI Home menu select Control & Manage.

	Cashboard Identification	Monitored & Switched	Per Outlet	t PDU		Search	Q ? admir
	Control & Manage	Power Environm Summary	ental Securi PDU#1	ty			
Total Load	1(%)		PDU Power I	Energy			
C	0.4 % POURT		PDU#	Apparent Power(VA) 82	Active Power(W) 0	Total Energy(KVh) 381.00	Energy(kMh) [since] 381.00 [2019/04/25 15:58:54]
Circuit Bre PDU#1	nakers						
PDU#1 Curren	t, RMS (A) Voltage, RMS (V) L	.oad(%)					

Figure 8.1-1: Control & Manage PDU

2. Select Outlet Control Enabled.

	命 🔺 🕀 🖪	0	Monitored Switched	IPDU	Search C	λ ? admin ∽
ontrol & Man	lage					Actions 🗸
Outlet Control E	nabled					
			PDU#1 PDU#2			
		l	B1 B2 B3 B4 B5	B6 Ø		
Outlet Name	Power Control	On Delay(0~7200s)	Off Delay(0~7200s)	State on Startup	Reboot Duration(5~60s)	
OUTLET 1	Ċ	0	0	Ċ	5	Ø
OUTLET 2	Ċ	5	5	Ċ	5	Ø
OUTLET 3	Ċ	0	0	C	5	Ø
OUTLET 4	Ċ	0	0	Ċ	5	Ø
OUTLET 5	Ċ	0	0	Ċ	5	Ø

Figure 8.1-2: Outlet Control Enabled

3. For each Outlet select the Edit pencil.

	命 🔺 🕀 🖥		Monitored Switched	PDU	Search C	८ ? admin ~
ontrol & Man	lage					Actions 👻
Outlet Control Er	nabled					
			PDU#1 PDU#2	8		
		В	1 B2 B3 B4 B5	B6 🖉		
Outlet Name	Power Control	On Delay(0~7200s)	Off Delay(0~7200s)	State on Startup	Reboot Duration(5~60s)	
OUTLET 1	Ф	0	0	Ċ	5	0 🖛
OUTLET 2	0	5	5	C	5	0
OUTLET 3	Ċ	0	0	Ċ	5	Ø
OUTLET 4	Ф	0	0	Ċ	5	0
OUTLET 5	(')	0	0	Ċ	5	0

Figure 8.1-3: Edit Outlets

4. In the Edit Outlet window enter the On-Delay time (0-7200 seconds) then select Save.

	☆ ▲ ⊕ 5		Monitored Switched I	>
Control & Man	age			Edit Outlet Information
Outlet Control Er	nabled 💽			Outlet Name OUTLET 1
			PDU#1 PDU#2	On Delay(0~7200s) 0
Outlet Name	Power Control	On Delay(0~7200s)	B1 B2 B3 B4 B5 E	Off Delay(0-7200s) 0
OUTLET 1	Ċ	0	0	State on Startup On ∇
OUTLET 2	Ф	5	5	Reboot Duration(5~60s) 5
OUTLET 3	Ċ	0	0	Save
OUTLET 4	Ċ	0	0	
OUTLET 5	Ċ	0	0	

Figure 8.1-4: On-Delay Time

5. Your Outlet Power Sequence has been set.

	⋒ 🖄 🕀 🗉	0	Monitored Switched	I PDU	Search Q	? admin ~
Control & Mar	nage					Actions 🗸
Outlet Control E	nabled					
			PDU#1 PDU#2			
		E	1 B2 B3 B4 B5	B6 🖉		
Outlet Name	Power Control	On Delay(0~7200s)	Off Delay(0~7200s)	State on Startup	Reboot Duration(5+60s)	
OUTLET 1	C	28	0	Q	5	Ø
OUTLET 2	C	5	o	C	5	Ø
OUTLET 3	Ċ	0	o	O	5	0
OUTLET 4	C	0	0	C	5	0
OUTLET 5	C	SPDU ULEr Manual REV 1.doc	NRead-Ordyl - Word	Ċ	\$	0

Figure 51: Saved Sequence

9. Connecting and Configuring Optional Hardware

9.1 Accessory Hardware Overview

Enconnex Monitored Input, Monitored Switched, Monitored per Outlet, and Monitored & Switched per Outlet PDUs can monitor environmental conditions of a rack with the addition of optional environmental sensors. Conditions such as temperature, humidity, leak detection, and intrusion can be monitored with the sensors. These are all vital aspects of maintaining an efficient-working data center atmosphere. Users and administrators can monitor the status, view reports, and alarms of specific conditions in and around a PDU, and server rack. (Note, only Enconnex type sensors work with the PDU controller)

The following sensors are available:

- Temperature Sensor
- Temperature + Humidity Sensor
- Three Temperature + Humidity Sensor
- Door Sensor
- Water Rope Sensor
- Sensor Hub
- Water Rope Sensor Extension

Sensor	Description	Sensor Measurement
Temperature Sensor	Monitors the temperature in the rack.	1
Temperature + Humidity Sensor	Monitors the temperature and relative humidity in the rack.	2
Three Temperature + Humidity Sensor	Monitors the temperature in three areas using three separate probes and the relative humidity using one probe.	4
Door Sensor	Sends an alarm or notification when a door on which the sensor is installed has been opened for more than 10 minutes.	1
Water Rope Sensor	Monitors for early detection of liquid with a resistivity of less than 2 megaohms (including distilled water) in the monitored area. The kit includes a 6m rope and optional additional ropes can be added with an option	1
Sensor Port Hub	Allows for up to three environmental sensors to be connected to the PDU.	N/A
Leak Detection Sensor	The kit includes one additional 6m rope to pair with the leak detection sensor. A total of four extensions can be added to the leak detection sensor for a total length of 30m.	N/A

Figure 9.1-1: Sensor Descriptions and Measurement

The optional environmental sensors can be installed before or after completing the PDU installation, startup, and can be installed without turning off power to the PDU or the devices connected. Enconnex Monitored Input, Monitored Switched, Monitored per Outlet, and Monitored & Switched per Outlet PDUs are designed to collect a maximum of eight environmental sensor measurements per PDU. For example, the Environmental Three Temperature + Humidity Sensor collects four sensor measurements. See the table above for the sensor measurement collected from each environmental sensor.

All Enconnex PDUs have two physical sensor ports, and each PDU can collect a total of eight sensor measurements (or readings). For example, if a PDU has a Door Sensor and an Environmental Three Temperature + Humidity Sensor connected, both physical sensor ports are used with a total of five sensor measurements recorded. Up to six physical sensors can be supported per PDU with the addition of the optional sensor hub.



Figure 9.1-2: Sensor Ports for vertical PDU



Figure 9.1-3: Sensor Ports for Horizontal PDU

9.2 Configuring Environmental Sensors

To configure the sensor location, alarms, notifications, and details, open the WEB Interface:

- 1. Open the Settings.
- **2.** View the Threshold section on the Settings page. Select Threshold to configure sensors.
- **3.** Go to external sensors.
- 4. Select the Edit button to configure the desired sensors.
- **5.** In the Edit dialog box, type value of up critical, up warning, low warning, and low critical.
- **6.** Select Save to exit the sensor setup. Repeat this process for additional sensors.

Warranty and Regulatory Information

Product Warranty

Complete the online product registration at https://www.enconnex.com/contact-us/ within 30 days of purchase to extend the standard two (2) year product warranty to a three (3) year product warranty.

Support and Other Resources

Customer Service: sales.usa@enconnex.com or +1 510 651 2205

Technical Support: sales.usa@enconnex.com or +1 510 651 2205

Acronyms and Abbreviations

Α

Amps/Amperes

AC

Alternating Current

AES

Advanced Encryption Standard

С

CLI

Command Line Interface

D

DES

Data Encryption Standard

DHCP

Dynamic Host Configuration Protocol

G

Gb

Gigabit

GUI

Graphical User Interface

I

IP

Internet Protocol

Κ

kVA

Kilo-Volt-Ampere

kW

Kilowatts

kWH

Kilowatt Hour

L

LAN

Local Area Network

LDAP

Lightweight Directory Access Protocol

0

OLED

Organic Light-Emitting Diode

Ρ

PDU

Power Distribution Unit

R

RNA

Redundant Network Interface

S

SHA

Secure Hash Algorithms

SNMP

Simple Network Management Protocol

Т

TCP/IP

Transmission Control Protocol/Internet Protocol

U

USB

Universal Serial Bus

V

Volts

W

Watts

Appendix A: CLI Commands

Help Commands

Command	Description	Example
Enconnex>?	List all available PDU CLI commands.	Enconnex>? sys - PDU system configure and setting. net - PDU net application configure and setting. usr - PDU user operation. dev - PDU device setting. pwr - PDU power setting.

Appendix A Table 1: Help Commands

System Commands

Command	Description	Example
sys ver	Query systems version information including firmware, bootloader, and Web.	Enconnex>sys ver SUCCESS Firmware version: 0.41 Bootloader version: 2.10 LANGUAGE version: 3.01
sys def	Recover PDU to default configuration.	Enconnex>sys def SUCCESS Recover
sys rst	Reset system.	Enconnex>sys rst Reboot required for change to take effect. System Reboot now, Are you sure? (Y/N):Y
sys upd all	Update systems firmware with existing pdu bin file.	Enconnex>sys upd lan SUCCESS system will enter upgrade mode after reboot System Reboot now, Are you sure?(Y/N):Y NOTE 1: There must be a valid file named Enconnex.bin existing under directory/fw. NOTE 2: If in daisy chain configuration, master will.
sys upd reboot	Update systems bootloader.	Enconnex>sys upd boot

		SUCCESS system will enter upgrade mode after reboot System Reboot now, are you sure?(Y/N):Y
sys upd conf	Update systems configuration.	Enconnex>sys upd conf SUCCESS system will enter upgrade mode after reboot System Reboot now, Are you sure?(Y/N):Y
sys log del event	Delete event log file.	Enconnex>sys log del event, SUCCESS
sys log edit date [on <interval> off]</interval>	Configure data log collection parameters.	Enconnex>sys log edit data on 1 SUCCESS
sys log del data	Delete data log file.	Enconnex>sys log del data, SUCCESS Enconnex>

Appendix A Table 2: System Commands

Network Commands

Command	Description	Example
net ssh [on/off]	Query or on/off SSH.	Enconnex>net ssh SUCCESS, SSH Port: 22
net ftps [on/off]	Query or on/off FTPs.	Net ftps
net http [on/off]	Query or on/off net http.	Enconnex>ne t http SUCCESS, HTTP Port: 80 HTTPS Port: 443 WEB Protocol: HTTP Enconnex>net http off E801 WEB protocol is changed, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y
net mac	Query MAC Address.	Enconnex>net mac SUCCESS MAC Addr: C8-45-44-66-
net tcp ip	Query networks IP information.	Enconnex>net tcpip SUCCESS
net tcp ip <dhcp></dhcp>	Set network to dhcp mode.	Enconnex>net tcp ip dhcp SUCCESS Network is reconfigured, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y

net tcp ip <static ip,="" mask,<br="">gateway></static>	Set static IP, mask and gateway.	Enconnex>net tcp ip static 192.168.30.39 255.255.255.0 192.168.30.1 SUCCESS Network is reconfigured, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y
--	----------------------------------	--

Appendix A Table 3: Network Commands

User Commands

Command	Description	Example
User List	List all existing user accounts.	Enconnex> usr list SUCCESS Usr Role admin admin
User unlock <username></username>	Unlock specified user.	Enconnex>usr unlock user SUCCESS Enconnex>usr unlock admin SUCCESS NOTE: 1. Account would be locked temporarily if login failure excess "Maximum number of failed logins". Use this

Appendix A Table 4: User Commands

Power Commands

Command	Description	Example
pwr unit [idx]	Query device information, Query specified index unit's electric information.	Enconnex> pwr unit SKU: P9S20A , , , , Serial: , , , , FuncType: PDU Monitored Rating :220-240V, 16A, 3.5- 3.8kVA, 50/60Hz Mac :C8:45:44:66:2B:26 Tcp Ip :192:168:30:38 Enconnex>pwr unit 1 SUCCESS PDU UNIT 1 power Feature voltage: 0V current : 0.0A active power: 0W apparent power: 0W power factor: 0.00 energy: 0.000kWh
pwr phase <idx></idx>	Query specified phase's electric information.	Enconnex> pwr phase 1 SUCCESS PDU PHASE 1 power Feature voltage: 0V current : 0.0A active power: 0W apparent power: 0W power factor: 0.00 energy: 0.000kWh
pwr cb <idx></idx>	Query specified circuit breaker's Electric information.	Enconnex> pwr cb 1 SUCCESS PDU CB 1 power Feature voltage: 0V current : 0.0A active power: 0W apparent power: 0W power factor: 0.00 energy: 0.000kWh
pwr outlet <idx></idx>	Query specified outlet's electric information.	Enconnex> pwr outlet 1 SUCCESS PDU OUTLET 1 power Feature voltage: 0V current : 0.0A active power: 0W apparent power: 0W NOTE: For Monitored PDUs, this command is invalid.

Appendix A Table 5: Power Commands

Appendix B: Firmware Update Procedure

USB Method

- **1.** Go to <u>https://www.enconnex.com/contact-us/</u> and download the most recent firmware version, enconnex.fw Save this file to a USB drive.
- 2. Insert the USB drive into the USB port of the Intelligent Network Controller.
- **3.** Enter USB mode on the PDU: Press Select. Go to Setup>USB>Yes. Select Yes to confirm entering USB mode.
- 4. Select F/W Up>Yes to upload the new firmware.
- 5. The OLED will show the firmware update progress.
- 6. When the update is complete, remove the USB.
- 7. From the USB Menu, select Quit to exit USB mode. Select Yes to confirm exit.
- 8. The PDU will automatically reboot.
- **9.** To confirm that the firmware was uploaded successfully, go to Setup>Device>Firmware.

Web Interface Method

- 1. Open the User interface in a web browser by entering the PDU IP address.
- **2.** Login to with administration credentials.
- **3.** Go to System Management >Update Firmware.
- 4. In the Firmware Update dialog box, browse to https://www.enconnex.com/contact- us/ firmware file.

Enconnex1.0L
Enconnex1.0.0.
Enconnex1.0.L.
Model19
Upload Firmw
This PC
A Maxwell
He hame
Open V Cancel

Appendix B Figure 1: Upload Firmware

NOTE: the firmware file must be named enconnex.fw

5. Select Upload. The system will update the newest firmware to the Intelligent Network Controller.

	Monitored Switched PDU	×			
ystem Management					
Security Security 1					
CestalNeet					
Control English		Upload Firmware			
Contect Double	o Uploading	Cheese Firmers Choose File Encourses PW			
Provident Continuence		Upload			
Texas Development					
Core Laudon Protein					

Appendix B Figure 2: Uploading Firmware

6. When the upload is finished, the system will reboot automatically.

FTPS Method

To access a PDU using a FTPS program, FTPS must be enabled through the PDU Web Interface or CLI. In the Web Interface, go to Network Settings >SSH/FTPS Configuration. Select the check box to enable FTPS Access. In the CLI, login as an administrator and use the command net tcp ip FTPS open

- 1. Login to a FTPS program using a role with administrator privileges.
- **2.** Transfer the updated enconnex.fw file to the folder labeled fw. Close the FTPS.
- 3. Connect to the PDU via SSH using a program such as HyperTerm or PuTTY.
- **4.** Login using a role with administrator privileges.
- 5. Enter the command sys upd all.
- **6.** It will show the message: System will enter upgrade mode after reboot, System Reboot now, Are you sure? (Y/N).
- 7. Enter Y.

- **8.** When the upload is finished, the system will reboot automatically. It is not always required to update Web or Bootloader files when the firmware is updated. However, a user can upload these file types in SSH:
 - a. Login to a FTPS program.
 - b. Overwrite the outdated files with the updated web files (found on the customer login at https://www.enconnex.com/contact-us/or from your Enconnex contact).

Bootloader Mode

- **1.** Go to https://www.enconnex.com/contact-us/ and download the most recent firmware version, enconnex.fw. Save this file to a USB drive.
- 2. Insert the USB drive into the USB port of the Intelligent Network Controller.
- **3.** Enter USB mode on the PDU: Press Select. Go to Setup>USB>Yes. Select Yes to confirm entering USB mode.
- 4. Select F/W Up>Yes to upload the new firmware.
- 5. The OLED will show the firmware update progress.
- 6. When the update is complete, remove the USB.
- **7.** From the USB Menu, select Quit to exit USB mode. Select Yes to confirm exit.
- 8. The PDU will automatically reboot.
- **9.** To confirm that the firmware was uploaded successfully, go to Setup>Device>Firmware.

Firmware Recovery with Bootloader Mode

Firmware, configuration files, and bootloader files can be updated following the steps above, but each update type must be done separately. Web files can be updated in conjunction with any of the other updates. I.e., a user can update firmware and web files in a single step. But firmware and configuration files must be done separately.

Appendix C: System Recovery

Upgrade Configuration with Bootloader Mode

To make the PDU accessible through the USB port on the unit, you must:

- **1.** Go to Device Configuration > USB Settings.
- 2. Select the Enable USB Access Checkbox.

To upload configuration, you must:

- **1.** Copy conf.ini to USB.
- 2. Insert USB to PDU.
- **3.** Enter USB mode in OLED device.
- 4. Select Conf up.
- 5. After the operation is completed, remove USB, and quit USB mode.

Appendix D: PDU Alarms

PDU Unit	PDU Unit Active Power Above upper critical PDU Unit Active Power Above upper warning PDU Unit Active Power Below lower warning PDU Unit Active Power Below Lower critical
Input Phase	Input Phase X Voltage Above upper critical Input Phase X Voltage Above upper warning Input Phase X Voltage Below lower warning Input Phase X Voltage Below lower critical Input Phase X Current Above upper critical Input Phase X Current Above upper warning Input Phase X Current Below lower warning Input Phase X Current Below lower critical
Circuit Breaker	Circuit Breaker X Current Above upper critical Circuit Breaker X Current Above upper warning Circuit Breaker X Current Below lower warning Circuit Breaker X Current Below lower critical Circuit Breaker Status ON Circuit Breaker Status OFF
Outlet	Outlet X Active Power Above upper critical Outlet X Active Power Above upper warning Outlet X Active Power Below lower warning Outlet X Active Power Below lower critical Outlet X Immediate ON Outlet X Delayed ON Outlet X Immediate OFF Outlet X Delayed OFF Outlet X Immediate REBOOT Outlet X Delayed REBOOT Outlet X Cancel Pending Command
External Sensor	External Sensor X (numerical) Above upper critical External Sensor X (numerical) Above upper warning External Sensor X (numerical) Below lower warning External Sensor X (numerical) Below lower critical External Sensor X (state) Alarmed External Sensor X (state) Communication Lost
System	System Event log Cleared System Data log Cleared System PDU configuration file Imported System PDU configuration file Exported System Firmware update completed System Firmware update failed System Firmware update started System Firmware Validation failed System an

	LDAP error occurred System Network interface link state is up System Sending SMTP message failed System Intelligent Network Controller reset System Intelligent Network Controller start System Communication Lost Daisy Chain state changed USB Port
User Activity	User Activity User X Authentication failure User Activity User X User logged in User Activity User X Session timeout User Activity User X User blocked
User Administration	User Administration Password changed User Administration Password settings changed User Administration User added User Administration User deleted User Administration User modified
Smart Rack Access	Smart Rack Access Door Open Smart Rack Access Door Closed Smart Rack Access User Card Swiped Smart Rack Access Door Auto Locked

Appendix D Table 1: PDU Alarms

Trap Codes assigned to Alarms List

Trap codes assigned for critical alarms:

Trap Class	Trap Code	Trap Description
Critical	1	The PDU unit power is Above critical threshold value.
Critical	2	The PDU unit active power is BELOW critical threshold value.
Critical	3-5	The phase (1-3) voltage is ABOVE critical threshold value.
Critical	6-8	The phase (1-3) voltage is BELOW critical threshold value.
Critical	9-11	The phase (1-3) current is ABOVE critical threshold value.
Critical	12-14	The phase (1-3) current is BELOW critical threshold value.
Critical	15-26	The circuit breaker (1-12) current is ABOVE critical threshold value.
Critical	27-38	The circuit breaker (1-12) current is BELOW critical threshold value.
Critical	39-50	The circuit breaker (1-12) is in OFF state.
Critical	51-98	The outlet (1-48) active power is ABOVE critical threshold value.
Critical	99-146	The outlet (1-48) active power is BELOW critical threshold value.
Critical	147-154	The sensor (1-8) temperature/humidity is ABOVE critical threshold value.
Critical	155-162	The sensor (1-8) temperature/humidity is BELOW critical threshold value.
Critical	163-170	The sensor (1-8) contact state is in alarm.
Critical	183	User authentication failed.

Critical	186	Power or relay communication lost to main board.
Critical	193	Firmware update failed.

Appendix D Table 2: Trap Codes: Critical Class

Trap Class	Trap Code	Trap Description
Warning	200	The PDU unit active power is ABOVE warning threshold value.
Warning	201	The PDU unit active power is BELOW warning threshold value.
Warning	202-204	The phase (1-3) voltage is ABOVE warning threshold value.
Warning	205-207	The phase (1-3) voltage is BELOW warning threshold value.
Warning	208-210	The phase (1-3) current is ABOVE warning threshold value.
Warning	211-213	The phase 1 current is BELOW warning threshold value.
Warning	214-225	The circuit breaker (1-12) current is ABOVE warning threshold value.
Warning	226-237	The circuit breaker (1-12) current is BELOW warning threshold value.
Warning	238-249	The circuit breaker (1-12) is in OFF state.
Warning	250-297	The outlet (1-48) active power is ABOVE warning threshold value.
Warning	298-345	The outlet (1-48) active power is BELOW warning threshold value.
Warning	346-353	The sensor (1-8) temperature/humidity is ABOVE warning threshold value.

Warning	354-361	The sensor (1-8)
		temperature/numidity is BELOW warning
		threshold value.

Appendix D Table 3: Traps Codes:Warning Class

Trap Class	Trap Code	Trap Description
Informational	380-391	The circuit breaker (1-12) is in ON state.
Informational	392-439	The outlet (1-48) IMMEDIATE ON occurred.
Informational	440-487	The outlet (1-48) DELAYED ON occurred.
Informational	488-535	The outlet (1-48) IMMEDIATE OFF occurred.
Informational	536-583	The outlet (1-48) DELAYED OFF occurred.
Informational	584-631	The outlet (1-48) IMMEDIATE REBOOT occurred.
Informational	632-679	The outlet (1-48) DELAYED REBOOT occurred.
Informational	680-727	The outlet (1-48) Cancel Pending Commands occurred.
Informational	728-735	The sensor (1-8) contact state is in cleared state.
Informational	740	Event log Cleared.
Informational	741	Data log Cleared.
Informational	742	PDU configuration file Imported.
Informational	743	PDU configuration file Exported.
Informational	744	Firmware update completed.
Informational	745	Firmware update started.
Informational	746	An LDAP error occurred.
Informational	747	Network interface link state is up.

Informational	748	Communication Module reset.
Informational	749	Communication Module start.
Informational	750	Daisy Chain state changed.
Informational	751	USB Port Enabled.
Informational	752	User xxx logged in.
Informational	753	User xxx session timeout.
Informational	754	User xxx blocked.
Informational	755	User xxx password changed.
Informational	756	User password settings.
Informational	757	User xxx added.
Informational	758	User xxx deleted.
Informational	759	User xxx modified.
Informational	761	Smart Rack Access Door Opened.
Informational	762	Smart Rack Access Door Closed.
Informational	763	Smart Rack Access User Card Swiped.
Informational	764	Smart Rack Access Door Auto-locked.

Appendix D Table 4: Trap Codes: Informational Class

Trap Class	Trap Code	Trap Description
Clear	770	The PDU unit active power is alarm clear.
Clear	771-773	The phase (1-3) voltage alarm cleared.
Clear	774-776	The phase (1-3) current alarm cleared.
Clear	777-788	The circuit breaker (1-12) current alarm cleared.
Clear	789-836	The outlet (1-48) active power current alarm cleared.
Clear	837-844	The sensor (1-8)
-------	---------	----------------------------
		temperature/humidity alarm
		0.00.001

Appendix D Table 5: Trap Codes: Clear Class

Appendix E: Horizontal Intelligent Network Controller Replacement

1. Unscrew the left and right captive nuts on the Intelligent Network Controller by turning them counter clockwise.



Appendix E Figure 1: Unscrew Intelligent Network Controller

2. Pull out the Intelligent Network Controller from the PDU.



Appendix E Figure 2: Remove Intelligent Network Controller from PDU

3. Insert the new Intelligent Network Controller.



Appendix E Figure 3: Inserting New Intelligent Network Controller

4. Align the Intelligent Network Controller and tighten the captive nuts by turning them clockwise.

Appendix F: Vertical Intelligent Network Controller Replacement

1. Use a T10 Torx screwdriver to remove the top and bottom screws from the Intelligent Network Controller.



Appendix F Figure 1: Removing Top and Bottom Screw from Intelligent Network Controller

2. Disconnect the existing signal wire from the Intelligent Network Controller. Connect the signal wire to the new Intelligent Network Controller.



Appendix F Figure 2: Disconnecting and Reconnecting the Intelligent Network Controller

3. Replace and tighten the two screws on the replacement Intelligent Network Controller into the PDU.